


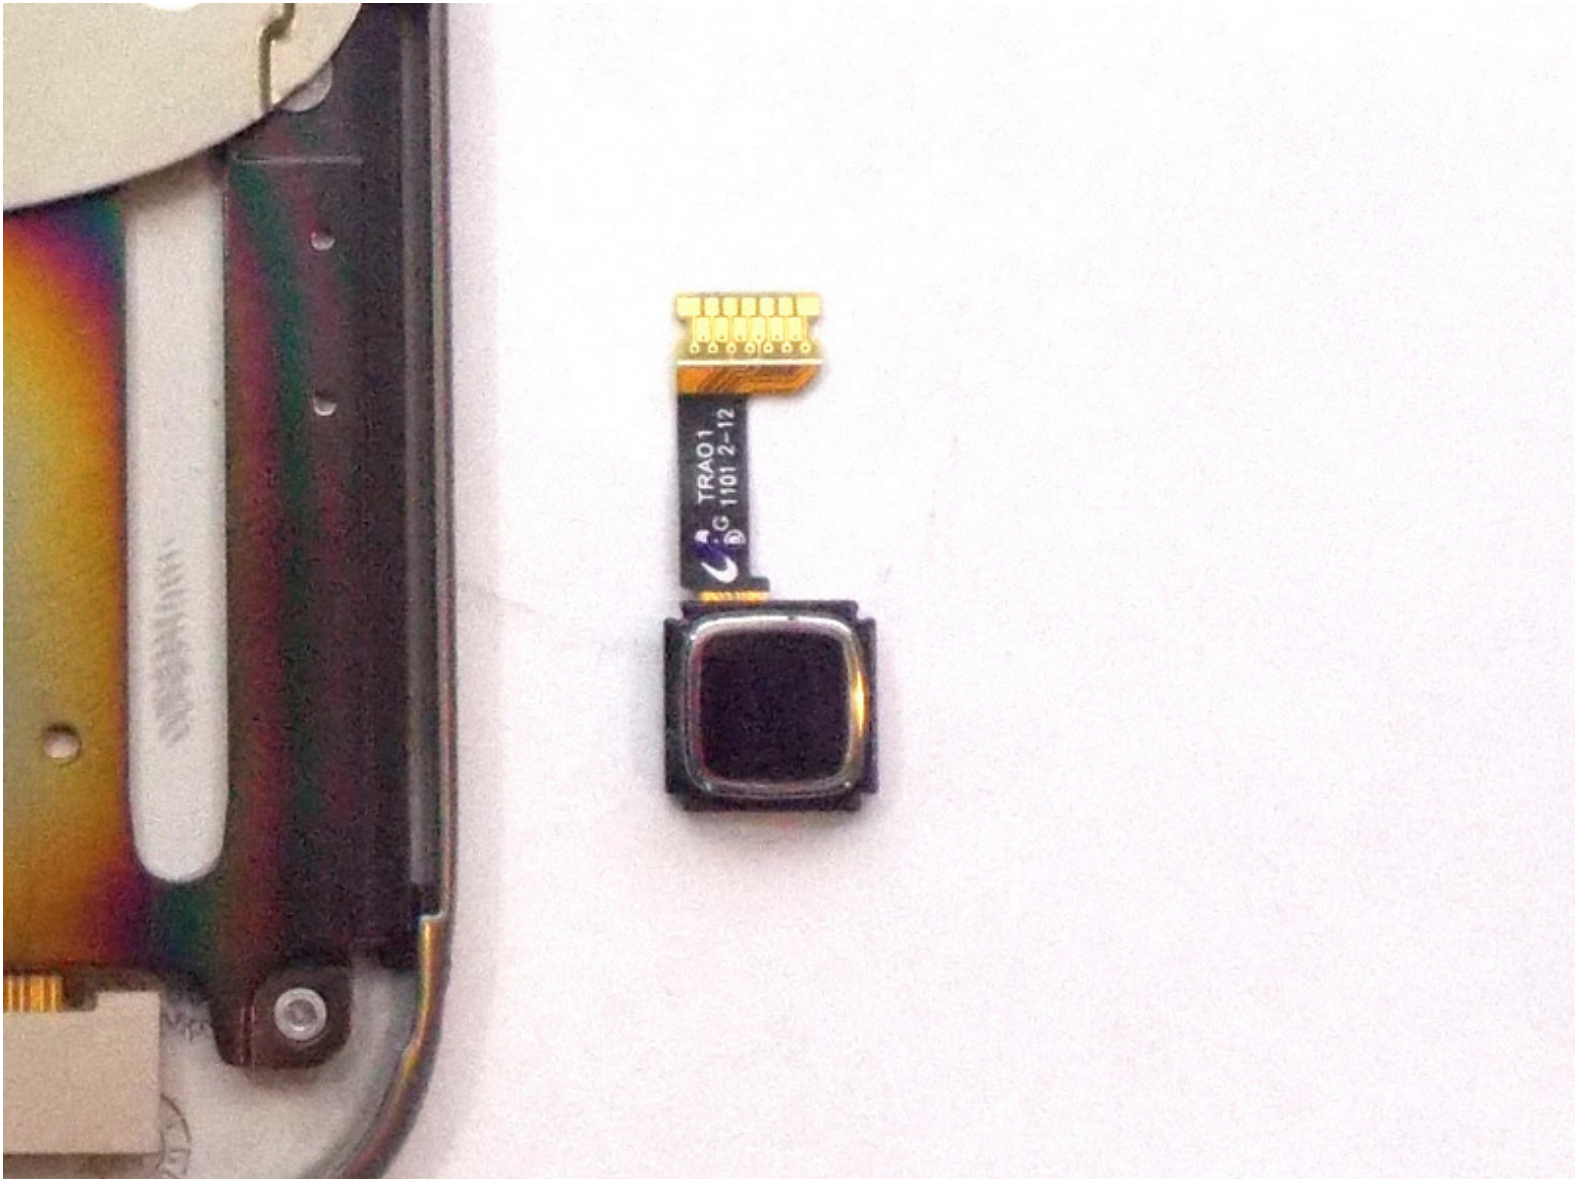

Blackberry Torch 9810 Cursor Key Replacement

This guide will show you how to replace your cursor key

Written By: Jocelyn Adorno





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T4 Torx Screwdriver](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Phone cover



- Remove the back cover of the phone

Step 2 — Battery



- Remove the battery

Step 3 — Remove screws



- Unscrew the four screws using the T6 screw driver.

⚠ If you remove the screw in red, you void the warranty!

Step 4 — Wiggle Wiggle




- Slide the screen up.
 - Remove front silver trim by using a plastic opening tools and wiggle it off.
- i** This is difficult to remove, but it should come off if you do it with caution.

Step 5 — More screws that need to go



- Once you remove the rim cover, you should find two more screws on the top. Unscrew them with a T-6 screw driver.

Step 6 — Remove the Back

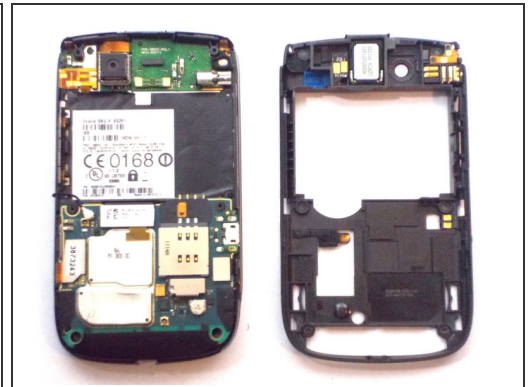

- Use the plastic opening tools to remove the entire back off the phone.

Step 7 — Remove Ribbon Cables




- Remove the three ribbon cables and the antenna wire by hand.
- The cable in red is glued to the metal cap. Peel it upwards towards the battery compartment.

Step 8 — Remove Logic Board



- The logic board will easily pull straight out.

Step 9 — Remove Informational Sticker

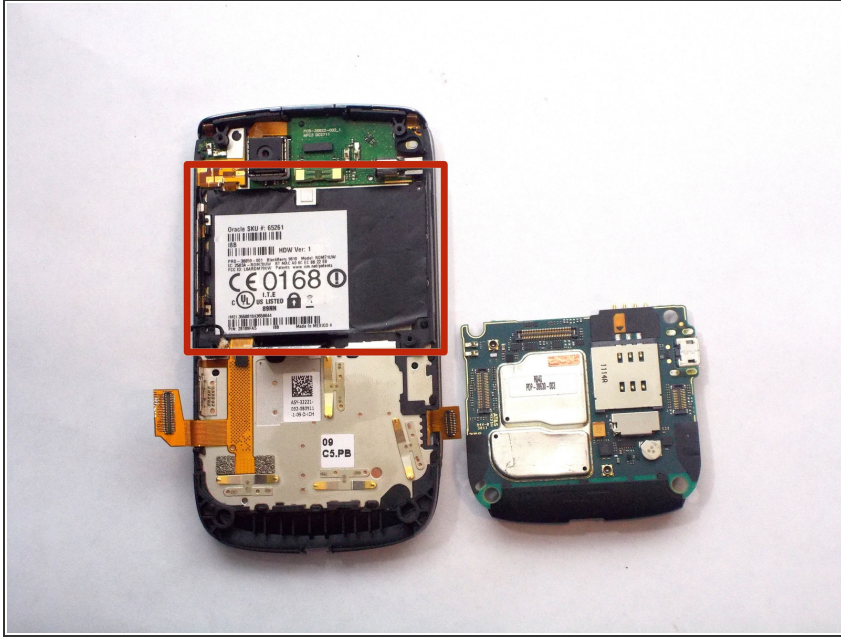


- Remove the black sticker located above the logic board that contains the phone's serial number

Step 10 — Remove More Screws



- Behind the black sticker you should find six small yellow screws. Remove them with a T4 torx screwdriver.

Step 11 — Separate the phone

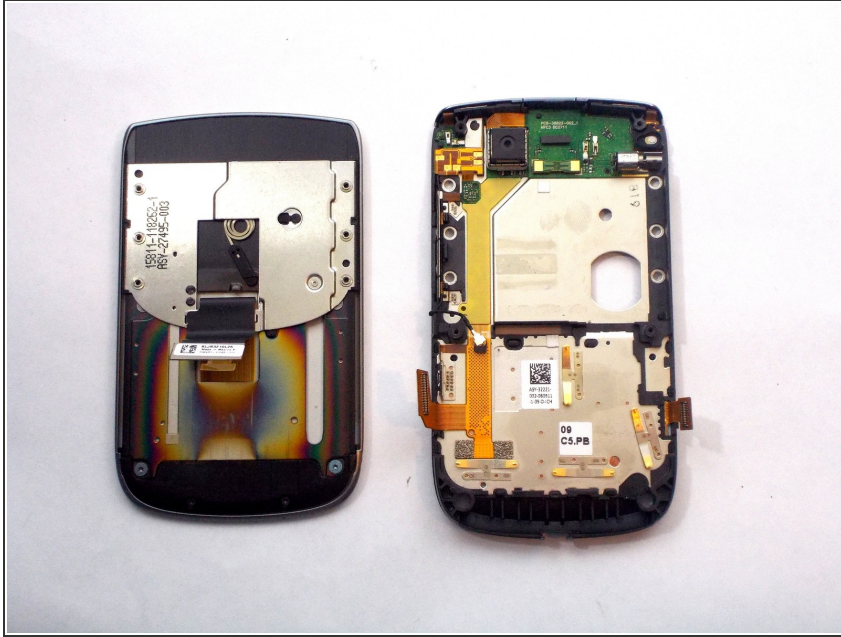

- Carefully separate the screen from the body.

⚠ Make sure to be extra careful with the ribbon!

Step 12





- Slide the silver plate up and you should find four more screws that need to be removed. Use a T-4 screw driver.
- They are on a black cover located on the bottom of the phone. The black cover will come off

Step 13 — Carefully Remove a Ribbon



- There is one last orange ribbon cable that needs to be pulled and behind it is the cursor

Step 14 — Cursor Key

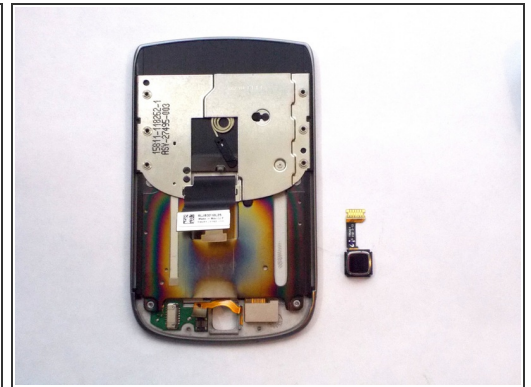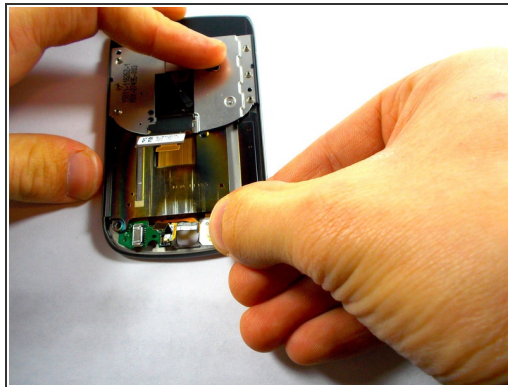

- Push the cursor upwards and out of the socket.
- Gently pull out the white box by pulling straight out of the socket to the right. This is your cursor

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 07:43:42 PM.